

Maintenance procedures VN/93

The recommended maintenance schedule must be followed as described below to ensure highest safety standard for your engine operation. The maintenance schedule is precautionary in relation to technical problems. The VN/93 system requires service by authorized personnel every 2 years and 2+2 years to ensure that the entire oil mist detector installation meet the makers requirements.

NOTE: All maintenance steps should be performed while engine is stopped!

Proc. no.:	Description of work:	Interval & required parts/tools:
1	<ul style="list-style-type: none"> 01.93: Check the negative pressure with u-tube manometer or digital manometer. Adjust if necessary! Setting level is 55.00 – 65.00 mm WC! 02.93: Clean infrared filters in measuring head with cotton pins and cleaning fluid and clean fresh air bores with cleaning needle. 03.93: Exchange air filters and fresh air restrictors in measuring head. 04.93: Perform functional test with test glass kit. 	Every 3 months or 2000 hrs. - whatever comes first! 151490 - Filter kit VN/93 151482 - Cleaning kit. 11072- Test glass kit 151800 - U- tube gauge or 100138 - Digital u- tube man.
2	<ul style="list-style-type: none"> 05.93: Exchange air filters in pressure regulator unit 06.93: Replace filter cartridge of water separator, if used. 	Every 6 months or 4000 hrs. - whatever comes first! 273119- Filter cartridge
3	<ul style="list-style-type: none"> 07.93: Clean inside and outside of the baseplate thoroughly, check bellows for cracks, gaskets and suspensions between measuring head and baseplate- <i>replace necessary parts!</i> 05.93 & 01.93: Check performance of pressure regulator- <i>replace necessary parts!</i> 08.93: Check and clean suction pipes/ pipe system and siphon blocks with compressed air - <i>replace necessary parts! Do not forget to refill the siphon blocks!</i> 09.93: Check scavenging air outlet behind the control cover manually (low-right) by feeling the air stream. 11.93: Perform functional test of entire OMD system with smoke ampulla kit or smoke generator. 	Every 12 months or 8000 hours. - whatever comes first! Service kits: VN 115/93 – P/n.: 100153-151489 VN 116/93 – P/n.: 100154-151487 VN 215/93 – P/n.: 100155-151488
4	<p>Inspection of entire OMD system to be performed by authorized service staff. Replacement of major parts to be done if necessary.</p> <ul style="list-style-type: none"> 10.93: Overhaul the complete OMD incl. clean the inside & outside of baseplate thoroughly and replace service kit parts for oil mist detector. 11.93: Perform functional test of entire OMD system with smoke ampulla kit or smoke generator. <p>If not possible to use authorized personnel, do as follows:</p> <ul style="list-style-type: none"> Perform procedure no. 3 – yearly maintenance, then replace the measuring head or complete oil mist detector during 48 months service. See section: 12.93 or 13.93. 	Every 24 months or 16000 hrs. -whatever comes first! Service kits: VN 115/93 – P/n.: 100153-151489 VN 116/93 – P/n.: 100154-151487 VN 215/93 – P/n.: 100155-151488 151482 - Cleaning kit 151780 - Smoke test kit 150740 - Smoke test generator
5	<p>Inspection of entire OMD system to be performed by authorized service staff. Replacement of major parts to be done if necessary.</p> <ul style="list-style-type: none"> 10.93: Overhaul the complete OMD incl. clean the inside & outside of baseplate thoroughly and replace service kit parts for oil mist detector. 11.93: Perform functional test of entire OMD system with smoke ampulla kit or smoke generator. <p>If not possible to use authorized personnel, do as follows:</p> <ul style="list-style-type: none"> 10.93: Overhaul the complete OMD incl. clean the inside & outside of baseplate thoroughly and replace service kit parts for oil mist detector. 12.93 or 13.93: Replace measuring head or complete oil mist detector. Use our Exchange pool (EXP) and perform 11.93. When replacing complete oil mist detector, process no. 10.93 is not necessary to perform! All replacement (EXP) to be report back to epp@epp.no for registration! 	Every 48 months or 32 000 hours -whatever comes first! Service kits: VN 115/93 – P/n.: 100153-151489 VN 116/93 – P/n.: 100154-151487 VN 215/93 – P/n.: 100155-151488 151482 - Cleaning kit 151780 - Smoke test kit 150740 - Smoke test generator Exchange Pool (EXP): Please contact us at epp@epp.no to find your specific exchange unit!

Section 01.93: Adjust negative pressure



1. Turn off the air and install the quick connection.



2. Fill in slacked water in the u-tube manometer to the middle line.



3. Insert it into the quick connection and adjust the pressure to 60mmWC.



4. Disconnect the u-tube manometer and install the plug for inspection cover.

Section 02.93: Exchange air filters and fresh air restrictors



1. Open the inspection cover.



2. Replace the fresh air restrictor and the scavenging air filter.




3. Close the inspection cover.

Section 03.93: Clean infrared filters in measuring head



1. Open the inspection cover.

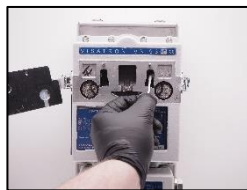

2. Clean the infrared sensor glasses with cotton sticks and cleaning fluid.



3. Close the inspection cover.

Section 04.93: Test system with test glass kit



1. Open the inspection cover on the measuring head.



2. The oil mist detector needs to be in operation mode with negative pressure set to 60mmWC.



3. Place the test plate over the open chamber – the test plate will be sucked into position by the vacuum in the measuring head.



4. Press the 10% glass into the slit in the test plate. Ensure the glass is in a straight vertical position.




5. The measuring head will now enter alarm mode.


Section 05.93(1): Replace filter and o-ring in pressure regulator (old type)



1. Close the air pressure.

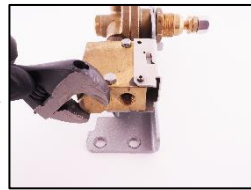

2. Unscrew the filter plug.

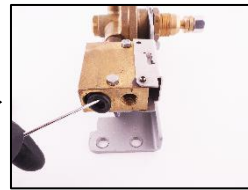

3. Pull out the o-ring and filter using a small flat screwdriver.



4. Replace both the o-ring and filter.



5. Screw in the filter plug with new parts on it.



6. Tighten the plug.



7. Open the air pressure.

Section 05.93(2): Replace filter in pressure regulator (new type)



1. Close the air pressure.



2. Hold the filter cage in one hand and pull the blue tab down horizontally with your thumb.



3. Turn the filter cage clockwise and pull out downwards.



4. Unscrew the black plastic disc and remove the dirty filter.



5. Screw in the new filter counter clockwise and make sure that it is aligned for installation.



6. Reinstall the filter cage.



7. Open the air pressure.

Section 07.93: Clean inside & outside of the baseplate and check parts



1. Stop the engine and close the incoming air pressure.



2. Disconnect the RESET task connector.



3. Dismount the measuring head.



4. Disconnect the connection case.



5. Check the small seal.




6. Check the valve box seal.



7. Reconnect the connection case to the baseplate.



8. Unscrew the vibration plate and check for damage.

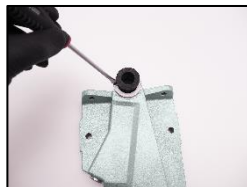

9. Check the flexible bellows.



10. Install the vibration plate to the baseplate.

Section 08.93: Check and clean pipe system and siphon blocks



1. Loosen the pipe connections from the connection casing.



2. Use compressed air to blow back collected oil into the engine.



3. Tighten the pipe to the connection casing.



4. Loosen the screws on the siphon block...



5. ...until able to be removed from the engine.



6. Disconnect the pipes from the siphon block.



7. Unscrew the screws completely



8. Take of the cover of the siphon block.



9. Remove and check the rubber inserts.



10. Check the o-ring.



11. Tighten the screws until the siphon block holds together.



12. Re-connect the pipes to the siphon block.



13. Unscrew the bottom screw on the siphon block.



14. Insert pump into the siphon block.



15. Tighten the screw on the pump.



16. Pump in the oil.



17. Unscrew the pump and reinstall the screw.

Section 09.93: Check scavenging air inlet



1. Open the inspection cover on the measuring head.



2. Feel that air streams from hole in the lower-right corner.

Section 10.93: Clean inside & outside of the baseplate and replace service kit



1. Stop the engine and close the incoming air pressure.



2. Disconnect the RESET task connector.



3. Dismount the measuring head.



4. Disconnect the connection case.



5. Change the small seal.



6. Change the valve box seal.



7. Reconnect the connection case to the base plate.



8. Unscrew the vibration plate.



9. Replace the mounting system.



10. Replace the flexible bellows.




11. Install the new vibration plate to the base plate.



12. Reinstall the measuring head at the vibration plate.



13. Open the inspection cover.

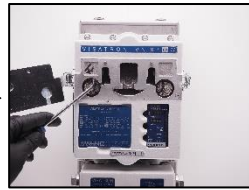

14. Change the scavenging air filter.



15. Change the seal for inspection cover.



16. Clean the infrared sensor glasses with cotton sticks and cleaning fluid.



17. Clean the bores with cleaning needle.



18. Change the screw plug seal 1/4" for inspection cover.



19. Close inspection cover.



20. Check the heating element if it is hot. If cold – replace!



21. Check all leaders in the main socket. If bad condition – replace!

Section 11.93: Perform functional test of entire OMD system with smoke ampulla kit



1. With the crank cases open, break glass capsules in the smoke test tube to activate smoke production.



2. Place the test tube right under sampling funnel and pump smoke into it until the measuring head enters alarm mode.




3. Repeat the process for all the sampling funnels to ensure the pipe is not blocked. Use the same tube as long as it is producing smoke.



4. When all sampling funnels have been tested, close the crank case covers and your system is ready for use.

Section 12.93: Replacement of exchange measuring head and service kit

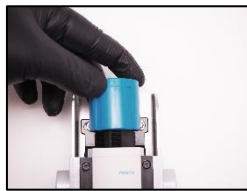

1. Stop the engine and close the incoming air pressure.



2. Disconnect the RESET task connector.



3. Dismount the measuring head.



4. Disconnect the connection case.



5. Change the small seal.



6. Change the valve box seal.



7. Reconnect the connection case to the base plate.



8. Unscrew the vibration plate.



9. Replace the mounting system.




10. Change the flexible bellows.



11. Replace the scavenging air bellow.



12. Install the new vibration plate to the base plate.

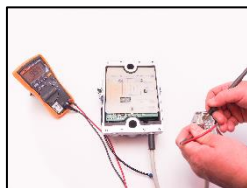

13. Ensure the exchange measuring head has the same wire break value as the previous measuring head. See the last page for description.



14. Replace the measuring head.



15. Check all leaders in the main socket. If bad conditions – replace the connection socket!


Section 13.93: Replacement of exchange oil mist detector



1. Stop the engine and close the incoming air pressure.



2. Disconnect the used oil mist detector.

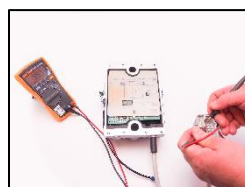

3. Ensure the exchange measuring head has the same wire break value as the previous measuring head. See the last page for description.



4. Install new exchange unit and main connection socket.

Wire break resistance for oil mist alarm

The wire break resistance is a set resistance value for the oil mist alarm. It is important to ensure that the wire break resistance is correct according to the required resistance for the alarm shut down function of the engine. If the value is not correct according to required wire break resistance value (at the alarm shut down function panel) this may lead to a situation where you get no shut down or reduced RPM of the engine during a real high oil mist level alarm situation!

If you are replacing the complete VN/93 oil mist detector or a measuring head with an exchange unit you always need to check the documented wire break resistance on the used device. When you have this information, you need to check that it is the same wire break resistance value on the new device before starting up the engine. If the wire break resistance is different between the devices, you can transfer the wire break resistances (2 pc. presented on the backside of the electronic module placed in the measuring head) from the used device to the new device.

